

ABTW_0071 - B787 Arrivals and Departures Answer Key


B787 Arrivals and Departures Review

The spool down time for the B787 is:

- ☐ 30 seconds
- ☐ 30 seconds **and** once the engine fan blades completely stop spinning
- ☐ 60 seconds
- ☒ 60 seconds **or** once the engine fan blades completely stop spinning; whichever comes first

B787 Arrivals and Departures Review

Click on the correct safety cone configuration for B787 bridging operations.

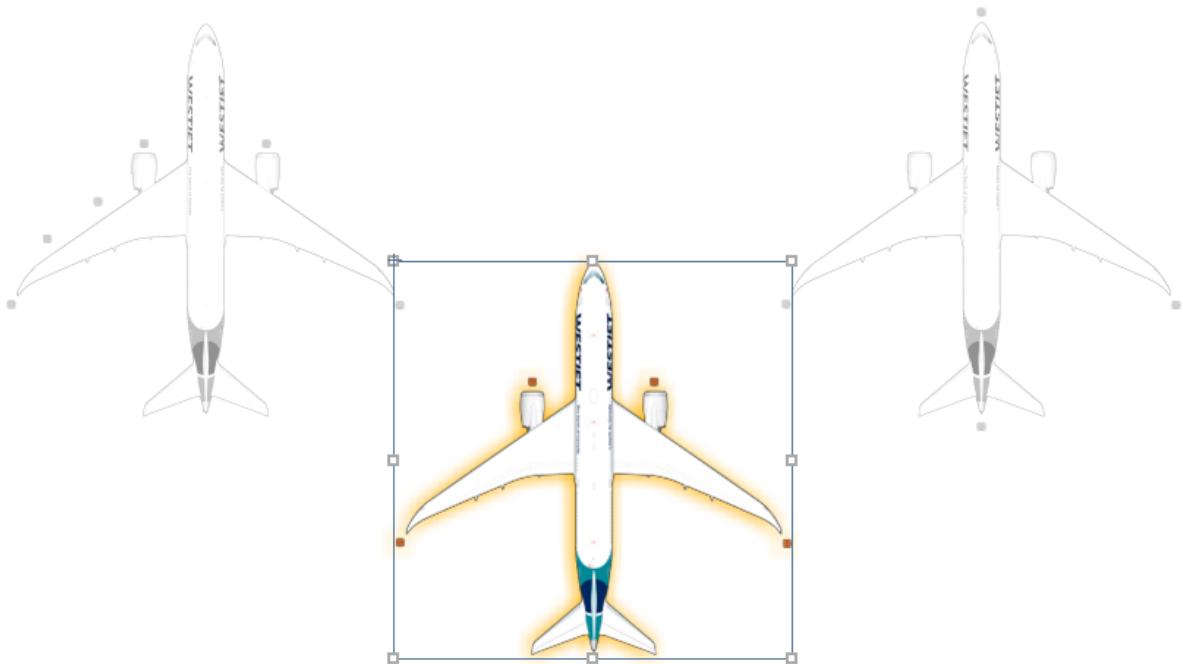

ABTW_0071 - B787 Arrivals and Departures

Answer Key

B787 Arrivals and Departures Review

The AME and the POA (or a designate of the POA) are required to do a pre-departure walk-around check of the aircraft.

- ☒ True
- ☐ False

B787 Arrivals and Departures Review

Select **ALL** of the true statements about towing the B787.

- ☒ The red lines on the nose gear doors indicating the maximum turn angle.
- ☒ The maximum turn angle is 70°.
- ☐ The maximum turn angle is 170°
- ☒ Towbarless tractors must not exceed 70% of the maximum turning angle.
- ☒ The maximum tow speeds for WestJet wide-body aircraft out of gate areas, hangars, or other congested areas is walking speed.

B787 Arrivals and Departures Review

Which engine is started when performing an assisted start for a B787 with an INOP APU?

- ☐ The #1 Engine
- ☒ The #2 Engine

ABTW_0071 - B787 Arrivals and Departures
Answer Key

B787 Arrivals and Departures Review

After the engine has been started, which GPU must be disconnected from the aircraft first?

☐ The forward GPU

☒ The aft GPU